
Specification Information



Product Code: 310-J Product Name: Jumbo Architectural Stand Alone Waste Receptacle Individual Carton UPC: 624622310035 Individual Carton Shipping Dimensions: 57.2cm W x 94.0cm H x 57.2cm D (22¹/₂" W x 37" H x 22¹/₂" D) Individual Carton Shipping Weight: 19.5 kg (43 lbs)

Site Location: Frost's 310-J jumbo lobby waste receptacle is ideal for high traffic areas requiring maximum waste capacity. This jumbo waste receptacle offers the quality and durability of an all stainless unit without the commitment of wall mounting. This large free standing waste container offers clean geometric design lines with radius corners, ideal for lobbies and reception areas. Typically, the disposals are used in schools/universities, airports, malls, office buildings, condominiums, fitness facilities, and recreation centres. The durable construction, high quality, and large capacity of this product make it a popular choice in high traffic areas requiring a professional look.

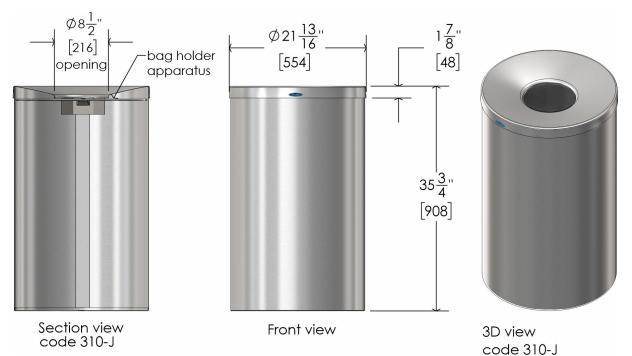

Features:

- All Canadian stainless steel construction, brushed finish
- Rounded soft edge design
- Comes with bag holder apparatus
- Waste opening is 21.6cm (8.5") in diameter
- Shipped in a durable corrugated container and covered in protective plastic
- Recommended bag size: 106.7cm x 121.9cm (42" x 48")

Capacity:

• The waste receptacle has a total capacity of 206 litres (54.4 US, 45.3 Imp. gal.)

Materials:

- Body: one piece roll formed 22 gauge stainless steel type 304 no. 4 brushed finish
- Bottom: spun 22 gauge stainless steel type 304 no. 4 brushed finish
- Lid: spun 18 gauge stainless steel type 304 no. 4 brushed finish

Frost Products Ltd 5276 John Lucas Drive Burlington, ON, Canada, L7L5Z9

(905) 332-5700 1-800 667-5094 info@frostproductsltd.com www.Frostproductsltd.com



Specification Information

Product Dimensions:

• 55.4cm W x 90.8cm H x 55.4cm D (21.8" W x 35.75" H x 21.8" D)

Product Weight:

• 19.1 kg (42.1 lbs)

Maintenance: When exchanging bags remove the lid of the waste receptacle and then pop the bag ring out of its secure bracket. Then tie off the garage bag and remove. When replacing the bag please slide the bag within the ring and around the ring's edge with the bag draping over the ring by approximately 6". Then snap the ring back into its secure bracket. This will keep the bag properly hidden and secure. This ring is not supposed to be on the inside of the garbage bag, doing so may lead to accidentally throwing away the bag holder ring. Normal preventative maintenance and cleaning will keep Frost products functioning properly and may extend normal product life. Products should be wiped down with a damp soft cloth periodically. Approved stainless steel cleaner may be used to clean scuffs or fingerprints on stainless surfaces. Do not use harsh detergents or chemical cleaners. For stainless steel please do not spray with any product containing bleach, acids, or chlorides, which can be found in many cleaning products such as toilet bowl cleaners. Use of these cleaning solutions may cause discolouration and if used for prolonged periods of time they can eat away at points in the stainless steel. If discolouration occurs, the use of an approved stainless steel cleaner and a firmer scrub pad, such as a Scotch Brite Pad #7447, may remove the markings. Wipe away any debris from the area and gently rub with the pad. Then spray the area with a stainless steel cleaner/polish and rinse and dry. Always wipe with the grain direction for stainless steel products. If a cleaning agent has begun to eat away at the steel on a unit then the unit will likely need to be replaced. The stainless steel that Frost Products uses is of high quality and stainless steel is resistant to rust. However, discolouration that appears to be rust can be caused by cleaning solutions and soaps mentioned above. It is important to discontinue use of any cleaning agent or soap if discolouration begins to occur. Clean off the discolouration as quickly as possible to avoid any permanent damage to the unit. Maintenance staff should be taught how to recognize the signs that they are not using the appropriate cleaning products and how to correctly maintain stainless steel items. When using any type of cleaning solution, spray onto a discrete area to test before full usage. After the cleaning agent is applied, wipe off with a clean soft cloth or sponge.

Warranty: If any product or part proves to be defective within 12 months from date of shipment from the factory it will be repaired or replaced without any charge including freight costs when authorized. Costs resulting from the installation or removal of defective products are not covered under this warranty. Discolouration to stainless steel parts resulting from exposure to harsh environmental and / or chemicals are not considered to be defects in workmanship or material and are not covered under warranty.